



**ARAGOON**

SAFETY PRODUCTS



Disposable Masks

# ARAGOON-N95V

## MOULDED DISPOSABLE DUST MASK

### TECHNICAL DATA SHEET

The AN95 is NIOSH approved respirator which has the additional benefits of being foldable for easy storage in a worker's pocket. The slightly different shape may be able to fit more workers in any workplace. This model has been designed to easily meet NIOSH's stringent approval requirements for breathing resistance and filtration efficiency.

AN95V cone respirator with exhalation valve.

### MATERIALS

Man made fibres. Polypropylene co-polymer exhalation valve with rubber diaphragm. Straps are manufactured from textile elastic and welded to the side of the mask.

Exceptional inside filter for very low breathing resistance

Individually adjustable Aluminum nose clip for excellent fit



High density Urethane foam to reduce leakage and improve worker comfort

Ergonomic design providing comfort and a secure fit

Ultrasonic welded head-straps for secure seal



Foldable shape that fits easily in your pocket

### CERTIFICATIONS





## TECHNICAL DATA SHEET

### FEATURES

» Meets NIOSH 42 CFR 84 N95 requirements.

### RECOMMENDED INDUSTRIES

Commercial Buildings, Construction, Design & Construction, Food Processing, Food Safety, General Manufacturing, Heavy Infrastructure, Mining, Oil & Gas, and Transportation.

### PACKAGING

» 10 masks/box; 12 boxes/case

### INSTRUCTIONS FOR USE


Mask must be fitted in accordance with the instructions supplied. Care must be taken to ensure that the correct mask type is selected for the work to be carried out. If in doubt as to the type of mask required seek professional advice.

## LIMITED WARRANTY

### IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof.

Exclusive Remedies: damages for the breach of this warranty are limited to the replacement of such quantity of Aragoon, products proved to be defectively manufactured. Except as provided above, Aragoon shall not be liable or responsible for any loss, damage, or liability, direct, indirect, incidental, special, or misuse, or the inability to use products by user.

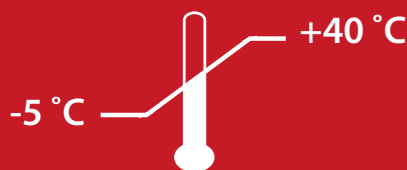

Storage temperature



Humidity of storage conditions



# ARAGOON

SAFETY PRODUCTS



Disposable Masks

## TECHNICAL DATA SHEET

### SERVICE TIME LIMITATION

- » Do not use the same respirator for more than 8 hours, continuous or intermittent, in dirty workplaces that could result in high filter loading.
- » Leave contaminated area and remove respirator if breathing becomes difficult or proper fit cannot be obtained or the respirator is damaged, soiled, or distorted.
- » Do not use the same respirator again once removed.
- » The maximum service time of this respirator is five (5) consecutive calendar days (including days of non-use), beginning from the first day of use.

### CAUTIONS AND LIMITATIONS

- » Not for use in atmosphere containing less than 19.5% oxygen.
- » Not for use in atmosphere immediately dangerous to life or health.
- » Do not exceed maximum use concentrations established by regulatory standards.
- » Failure to proper use and maintain this product could result in injury or death.
- » All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA and other applicable regulations.
- » Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configuration as specified by the manufacturer.

### NOTES

- » Use in well ventilated areas only, which are not deficient in oxygen and do not contain explosive atmospheres.
- » This mask is not designed to be worn by people with facial hair.

### PROTECTION

- » AN95 - Particulate Filter (95% filter efficiency level) effective against particulate aerosols free of oil; time use restrictions may apply.

- » Refer to user's instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
- » NIOSH does not evaluate respirators for use as surgical masks.
- » Special or critical User's Instruction and/or specific use limitations apply. Refer to User's Instructions before donning.
- » Special or Critical User's Instructions: The model AN95V filtering facepiece respirator has been manufactured by Approval Holder for ARAGOON PTY LTD under TC-84A-7869.





## **TECHNICAL DATA SHEET**

### **WARNINGS**

- » Wearer must read fitting instructions and use limitations before use.
- » The respirator does not protect against the risk of contracting disease or infection.
- » Before occupational use of this respirator, a written respiratory protection program must be implemented meeting all the local government requirements. In the United States employers must comply with OSHA 29 CFR 1910.134 which includes medical evaluation, training, and fit testing.

### **CLEANING & MAINTENANCE**

Not applicable – disposable product. Store the masks out of direct sunlight away from chemicals and in a dry atmosphere.

### **INSTRUCTIONS FOR USE**

1. Suitable for use against solid and liquid particulates including oil based mists.
2. This product does not protect against gases or where oxygen levels are below 17%.
3. Do not use when concentrations or contaminants are unknown or dangerous to life.
4. Leave the work area if distress or dizziness occurs.
5. Do not alter or modify the product in any way.
6. This product is intended only for single use and must not be used for more than 8 hours. Replace mask if contaminated or if breathing becomes difficult.
7. Facial hair may affect the efficiency of the product.
8. Do not use in an explosive area.
9. Ensure the product is suitable for the intended use.
10. Place/protect the product when not in use within its packaging.
11. Store within -5° C - +40° C. Store at <60% RH.

### **FITTING INSTRUCTIONS**

- » Hold the mask firmly and place the bottom headband over the head to the nape of the neck.
- » Place the mask under the chin, then over the nose, putting the top head band over the crown of the head.
- » Ensure that the nose clip is moulded around the nose securely.

### **FIT CHECK**

Check the fit of the mask by covering with both hands and exhale vigorously. Any leaks around the face seal must be eliminated before entering contaminated area.






# ARAGOON

SAFETY PRODUCTS




Disposable Masks

## TECHNICAL DATA SHEET

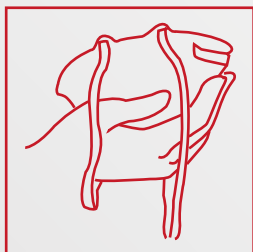

### STEP 1:

Hold the respirator in hand with the nosepiece at your fingertips, allowing the headbands to hang freely below your hand.

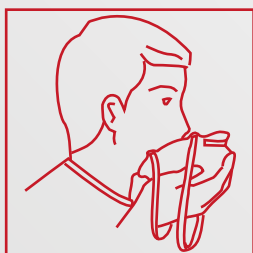

### STEP 2:

Press the respirator firmly against your face with the nosepiece on the bridge of your nose.



### STEP 3:

Stretch and position the top band high on the back of the head. Stretch the bottom band over the head and position below your ears.



### STEP 4:

Using both hands, mold nosepiece to the shape of your nose.



### STEP 5:

To test fit: A) Cup both hands over the respirator being careful not to disturb position, and B) Inhale vigorously. If air leaks around the edges, reposition the straps or adjust strap tension for better fit.

## ABOUT ARAGOON

 AUSTRALIA - SYDNEY  
 [www.aragoon.com.au](http://www.aragoon.com.au)  
 [info@aragoon.com.au](mailto:info@aragoon.com.au)  
 +61 415 251 119

 UAE - DUBAI  
 [www.aragoon.com.au](http://www.aragoon.com.au)  
 [info@aragoon.com.au](mailto:info@aragoon.com.au)  
 +971 503 242 474



# ARAGOON®

© 2019 Aragoon Ltd