



ARAGOON
SAFETY PRODUCTS



Disposable Masks

TECHNICAL DATA SHEET

ARAGOON-FFP3

SINGLE SHIFT USE VALVED PARTICULATE RESPIRATOR.



FEATURES

- » Single shift use valved particulate respirator.
- » Features exhalation valve to reduce temperature and humidity within the respirator and improve exhalation resistance.

PROTECTION

For protection against non-toxic, low to average toxicity and high toxicity solid and liquid aerosols, e.g. oil-mists, in concentrations up to 20X WEL (Workplace Exposure Limit).
i.e. APF (Assigned Protection Factor) = 20

CERTIFICATIONS

CE 0194
EN149:2001 FFP3 NR D





TECHNICAL DATA SHEET

MATERIALS

- | | |
|----------------------|--|
| 1. Outer Layer: | Polypropylene Fabric. |
| 2. Filter Media: | High Filtration Efficiency Melt-Blown (Polypropylene). |
| 3. Inner Layer: | Polyester Fabric. |
| 4. Nosebridge: | Aluminium. |
| 5. Nose Foam: | PVC Foam. |
| 6. Headstrap: | Kinnted Elastic Band. |
| 7. Headstrap Buckle: | Polypropylene (PP). |
| 8. Exhalation Valve: | Valve Housing - Polypropylene.
Valve Membrane - Synthetic Rubber. |

APPLICATIONS

- » Textile industry
- » Craft work.
- » Iron and steel industry.
- » Mining.
- » Underground civil engineering.
- » Woodworking.
- » Welding work, cutting and casting of metals.
- » Hospitals, laboratory and disease control.
- » Pharmaceutical industry.
- » Disposable of toxic waste.
- » Manufacture of batteries (Ni-Cad).

PACKING

- » PER BOX: 10 Masks
- » PER CARTON: 12 Boxes





TECHNICAL DATA SHEET

LIMITED WARRANTY


IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Aragoon will be met by products sold.

Exclusive Remedies: damages for the breach of this warranty are limited to the replacement of such quantity of Aragoon, products proved to be defectively manufactured. Except as provided above, Aragoon shall not be liable or responsible for any loss, damage, or liability, direct, indirect, incidental, special, or misuse, or the inability to use products by user.



Date of Expiration

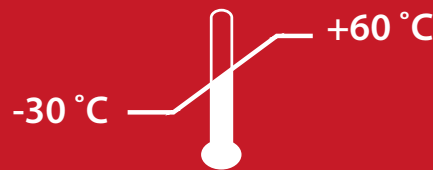

Storage temperature



Humidity of storage conditions

SERVICE TIME LIMITATION

- » Do not use the same respirator for more than 8 hours, continuous or intermittent, in dirty workplaces that could result in high filter loading.
- » Do not use the same respirator again once removed.
- » Leave contaminated area and remove respirator if breathing becomes difficult or proper fit cannot be obtained or the respirator is damaged, soiled, or distorted.





TECHNICAL DATA SHEET

WARNINGS

READ AND UNDERSTAND BEFORE USE

1. A properly selected respirator is essential to protect your health. Before using this product consult a safety professional to determine its suitability for your intended application.
2. As with any respiratory device, the wearer **MUST** be adequately trained prior to use. Before use, the wearer should always check the mask is in good condition - not dirt, no damage to headstrap attachment etc.
3. This product does not protect the wearer against gases, vapors or mist whose liquids produce harmful vapors or gases.
4. Do not use in sandblasting operations.
5. This product does not supply oxygen. Use this respirator only in well-ventilated areas containing sufficient oxygen (at least 19.5%) to support life.
6. Do not use when contaminant and the concentration are unknown or immediately dangerous to life and health.
7. Leave work area immediately if:
 - A) breathing becomes difficult.
 - B) dizziness or other distress,
 - C) the respirator becomes damaged or
 - D) an emergency occurs.
8. If user has any illness or discomfort, consult a licensed medical doctor to determine suitability of use.
9. Facial hair and certain facial characteristics will prohibit effective use of this product.
10. Replace a respirator when the breathing resistance become excessive due to dust loading or after a maximum of 8-hours continuous usage, "single shift use".
11. Failure to observe all warnings and instructions on the use of this respirator may result in serious illness or permanent injury.
12. The equipment should not act at an ignition source and it should not be use in explosive atmospheres as the concentration of contaminants within normal flammability range would exceed the limits in the selection guide.
13. Store respirator in a sealed container away from contaminated areas when not in use.
14. Store respirator in the original packing during transport.
15. Please make sure the mask fit properly before entering working environment.

PARITCULATE RESPIRATOR

The filtering respirator is designed for applications involving fine non-toxic dust and fibers.

This respirator meets the requirements of EN 149 (FFP2 NR) and should be used to protect the wearer from solid and water based aerosols only. The respirator can be used in concentrations of contarninate up to 10 times the Occupational Exposure Limits (OEL).





ARAGOON

SAFETY PRODUCTS




Disposable Masks

TECHNICAL DATA SHEET



STEP 1:

Hold the respirator in hand with the nosepiece at your fingertips, allowing the headbands to hang freely below your hand.

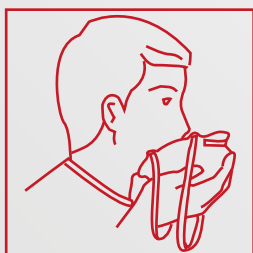

STEP 2:

Press the respirator firmly against your face with the nosepiece on the bridge of your nose.



STEP 3:

Stretch and position the top band high on the back of the head. Stretch the bottom band over the head and position below your ears.



STEP 4:

Using both hands, mold nosepiece to the shape of your nose.



STEP 5:

To test fit: A) Cup both hands over the respirator being careful not to disturb position, and B) Inhale vigorously. If air leaks around the edges, reposition the straps or adjust strap tension for better fit.

ABOUT ARAGOON

 AUSTRALIA - SYDNEY
 www.aragoon.com.au
 info@aragoon.com.au
 +61 415 251 119

 UAE - DUBAI
 www.aragoon.com.au
 info@aragoon.com.au
 +971 503 242 474



ARAGOON®

© 2019 Aragoon Ltd